


Ladder Point
Access

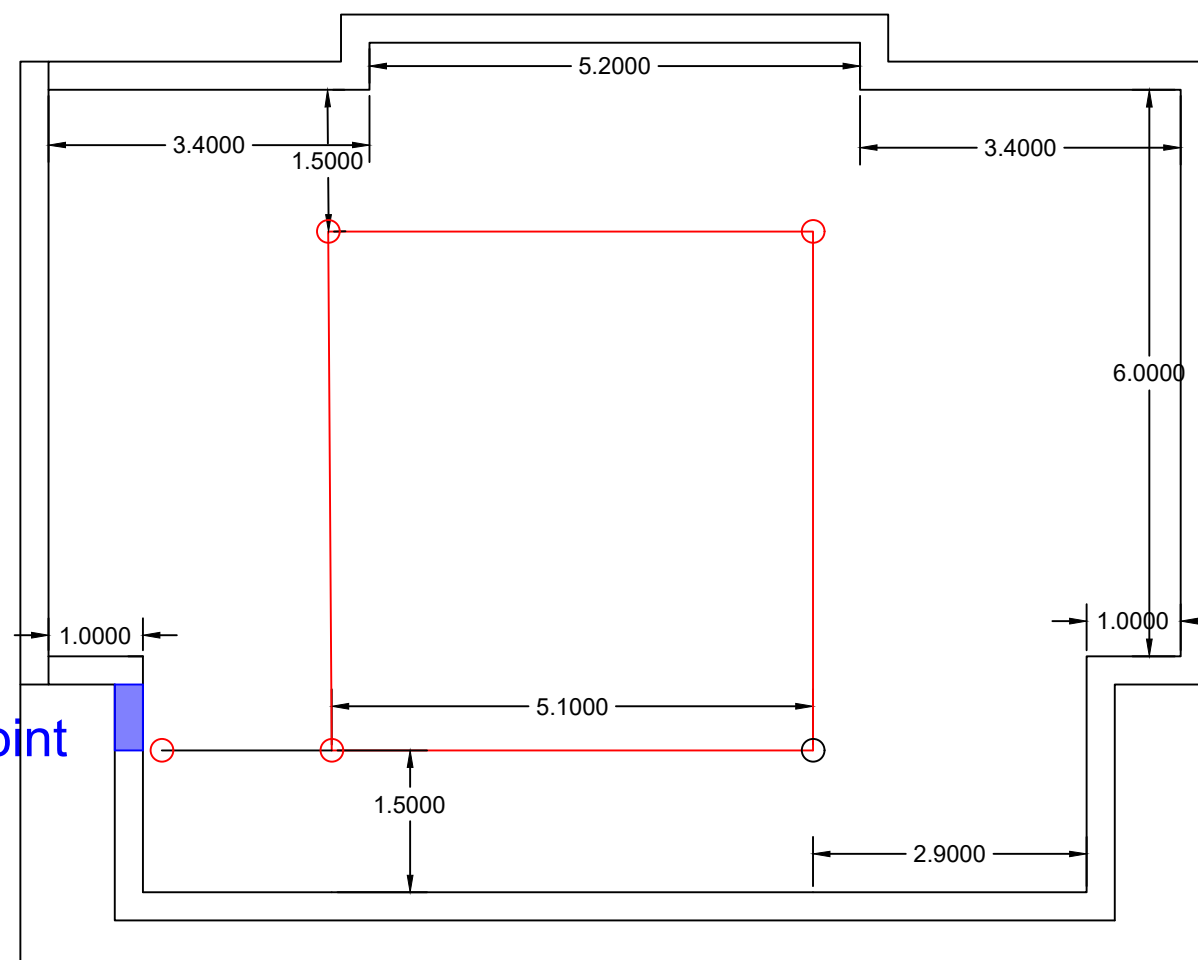

- ~ Install fall Restraint system as detailed.
- ~ Pull back existing lead to allow for roofing membranes.
- ~ Remove all cut in lead flashing and replace with new.
- ~ Overlay existing roof with 2 layers of approved torch applied bitumen felt.
- ~ Allow for removal of existing vent cowls, weathering upstands and replacing cowls on completion.
- ~ Allow for dressing roofing membrane over parapet upstands.
- ~ Dressing down of lead over parapets on completion of roofing felt.

Notes:

1. DIMENSIONS WITHIN THIS DRAWING ARE FOR INFORMATION PURPOSES ONLY AND SHOULD NOT BE RELIED ON.

REV	STA	DESCRIPTION	BY	DATE

Legend:



Keyplan:



TITLE: MAGNETIC OBSERVATORY PROPOSED ROOF PLAN			
DRAWING: UCD-OK-002			
SCALE: 1/10	DATE: 31/08/2024	DRAWN: CC	CHECKED: BA
STATUS CODE: P25	DRAWING NO: 002	REVISION: 0	